

Wacker Auftausalz

LEHNER POLARO E

Abgabehöhe (m): **0,60**

Stand: 02/2008

Einstellwerte im Praxistest überprüfen.

Arbeitsbreite (m)		0,8						1,0						1,2						1,5						2,0					
Drehzahl (U/min)		60						80						100						150						180					
Km/h		5	10	15	20	25	30	5	10	15	20	25	30	5	10	15	20	25	30	5	10	15	20	25	30	5	10	15	20	25	30
Schieberöffnung:																															
10 g/m²		23	26	29	30	31	32	24	28	30	31	32	33	25	29	31	32	33	35	26	30	32	33	35	36	28	31	33	35	37	38
15 g/m²		25	29	30	31	33	35	26	30	31	33	35	36	27	31	33	35	36	37	28	32	34	36	37	38	30	33	36	38	40	41
20 g/m²		26	30	31	34	36	37	28	31	33	36	37	38	29	32	35	37	38	40	30	33	36	38	40	41	31	35	38	40	42	43
25 g/m²		28	31	33	35	37	38	29	32	35	37	38	40	30	33	36	38	40	41	31	35	37	40	41	42	32	37	40	42	43	44
30 g/m²		29	32	35	37	38	40	30	33	36	38	40	41	31	35	37	39	41	42	32	36	39	41	42	43	33	38	41	43	44	48
40 g/m²		30	34	37	38	40	41	31	36	38	40	42	42	32	37	40	42	43	44	33	38	41	43	44	48	35	40	42	45	49	54
60 g/m²		32	36	39	41	42	43	33	38	41	42	44	48	35	40	42	43	48	50	36	41	43	48	54	56	38	42	48	52	58	62
Wurfschaufelstellung		Mittig						Mittig						Mittig						Mittig						Mittig					
Arbeitsbreite (m)		2,5						3,0						4,0						5,0						6,0					
Drehzahl (U/min)		200						250						350						400						600					
Km/h		5	10	15	20	25	30	5	10	15	20	25	30	5	10	15	20	25	30	5	10	15	20	25	30	5	10	15	20	25	30
Schieberöffnung:																															
10 g/m²		29	32	35	37	38	40	30	33	36	38	40	41	31	35	38	41	42	43	32	37	40	42	43	44	33	38	41	43	44	48
15 g/m²		31	35	38	40	42	43	32	36	39	41	43	44	33	38	41	42	44	48	35	40	42	43	47	51	36	41	43	46	53	54
20 g/m²		32	37	40	42	43	44	33	38	41	43	45	47	35	40	42	45	50	53	37	42	44	49	53	55	38	43	48	53	57	60
25 g/m²		34	38	42	43	45	46	35	40	43	44	47	53	37	42	44	49	54	57	38	43	48	53	57	61	40	44	53	57	62	67
30 g/m²		35	40	43	44	48	50	36	41	44	48	50	54	38	43	48	53	57	61	40	44	53	57	62	70	41	48	54	61	67	
40 g/m²		37	42	44	49	53	55	38	43	48	53	57	61	40	45	53	58	64	67	42	49	57	63			43	53	61	67		
60 g/m²		40	44	50	57	62	67	41	48	54	61	67	70	43	53	61	67			44	57	66				48	61				
Wurfschaufelstellung		Mittig						Mittig						Mittig						Mittig						Mittig					

Bei ungleicher Querverteilung kann der Streuteller für die Verstellspindel verändert werden.

©LEHNER